




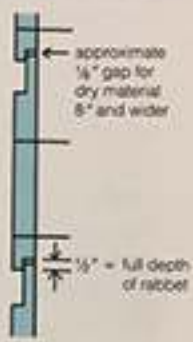


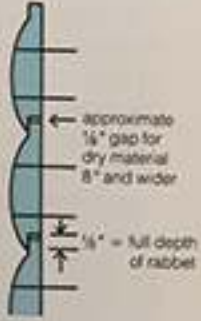


Figure 3: Continued

SIDING PATTERNS	NOMINAL SIZES * Thickness & Width	NAILING	
		6" & Narrower	8" & Wider
 <p>TONGUE & GROOVE Tongue & groove siding is available in a variety of patterns. T&G lends itself to different effects aesthetically. Refer to WWPA "Standard Patterns" (G-16) for pattern profiles. Sizes given here are for Plain Tongue & Groove. Do not nail through overlapping pieces. Vertical or horizontal applications.</p>	<p>1 x 4 1 x 6 1 x 8 1 x 10</p> <p>Note: T&G patterns may be ordered with 1/4, 3/8 or 1/2" tongues. For wider widths, specify the longer tongue and pattern.</p>	<p>Plain</p>  <p>Use one casing nail per bearing to blind nail.</p>	<p>Plain</p>  <p>Use two siding or box nails 3-4" apart to face nail.</p>
 <p>CHANNEL RUSTIC Channel Rustic has 1/2" overlap (including an approximate 1/8" gap) and a 1" to 1 1/4" channel when installed. The profile allows for maximum dimensional change without adversely affecting appearance in climates of highly variable moisture levels between seasons. Available smooth, rough or saw textured. Do not nail through overlapping pieces. Horizontal or vertical applications.</p>	<p>3/4 x 6 3/4 x 8 3/4 x 10</p>	 <p>Use one siding or box nail to face nail once per bearing. 1" up from bottom edge.</p>	 <p>Use two siding or box nails 3-4" apart per bearing.</p> <p>approximate 1/8" gap for dry material 8" and wider</p> <p>1/2" = full depth of rabbet</p>
 <p>LOG CABIN Log Cabin siding is 1 1/2" thick at the thickest point. Ideally suited to informal buildings in rustic settings. The pattern may be milled from appearance grades (Commons) or dimension grades (2x material). Allows for 1/2" overlap, including an approximately 1/8" gap. Do not nail through overlapping pieces. Horizontal or vertical applications.</p>	<p>1 1/2 x 6 1 1/2 x 8 1 1/2 x 10 1 1/2 x 12</p>	 <p>Use siding or box nail to face nail once per bearing. 1 1/2" up from bottom edge.</p>	 <p>Use two siding or box nails. 3-4" apart, per bearing to face nail.</p> <p>approximate 1/8" gap for dry material 8" and wider</p> <p>1/2" = full depth of rabbet</p>

SIDING INSTALLATION TIPS

- Do not nail through overlapping pieces.
- Horizontal applications only for Bevel, Bungalow and Dolly Varden.
- Vertical applications only for Board-and-Board or Board-and-Batten.
- Horizontal or vertical applications for Tongue & Groove, Channel Rustic, Log Cabin or Drop patterns.
- Use stainless steel, high tensile strength aluminum or hot-dipped galvanized nails with ring or spiral-threaded shanks. Use casing nails to blind nail; siding or box nails to face nail.
- Read the section on Nail Penetration & Spacing to determine nail size.
- Read the sections on Moisture Content and Prefinishing before installing siding.